


Printing Instructions Using SD Card

1

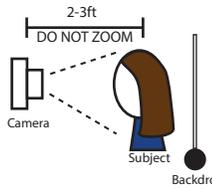


2-3ft
DO NOT ZOOM

Camera
Subject
Backdrop

With subject standing in front of white backdrop, align head and shoulders with the guide sticker on the camera LCD. (DO NOT ZOOM)

2

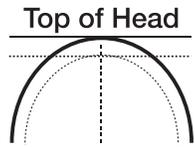

Top of Head USA CAN

Line up head and shoulders with solid line for USA passport photos and with dashed line for Canadian passport photos.

3



Ensure paper is in paper tray and ink ribbon cartridge is in printer.

4



After taking photo, remove SD card from camera.

5



Insert SD card in slot on the front of printer, label side up.

6



Press power button to turn on the printer.


7



ID Photo Settings
Size Selection Custom
Long Side 2.0 in
Short Side 2.0 in

Printer will default to 'ID Photo Settings'. USA systems will be set to 2x2 inch, Canadian systems will be set to 70mmx50mm. If photo size is correct, press 'OK'.

8

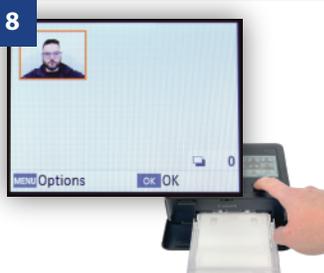


Select desired photo to print, press 'OK'.

9



Make sure crop marks are centered on the person, press 'OK'.

10

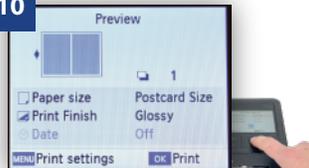

Preview

Print settings OK Print

Press 'OK' on the 'Print Preview' Screen.

11



There are images that have not been cropped. Print anyway?

Disregard error message, press 'OK'.

12



The print process will complete after 4 passes through the printer.

Printing Instructions Using USB (Requires USB-C to USB adapter: sold separately)

1




To plug camera into printer, insert a USB-C to USB adapter into printer. (sold separately)

2



Plug camera USB cable into adapter and into camera.

3

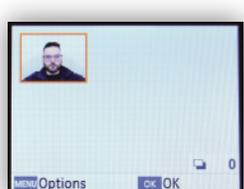

Printer will see camera as an SD card, continue from step #8 above.



Scan QR code to see the CP1500 Passport System in action!